



---

**MODEL  
F2N1-200**

---

**IMPORTANT**

**DO NOT DESTROY**

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**TOOL SCHEMATICS**

## REPLACEMENT PARTS

Part #	Description	Notes
P-043V	Valve assembly	
P-118	Cylinder	Includes o-rings & band-valve
P-145	Slider	Includes coil spring
P-206	Head	Includes o-ring Q-006A
P-235C	2-in-1 magazine	
P-237	Driving blade	
P-254	Handle grip	
P-316	Main body	
P-429	Foot	
P-433	Plastic base	
P-525A	Bumper	
P-525C	Seal bushing	
P-618A	Band-valve	
P-622	Piston	Includes wear ring
P-622A	Piston wear ring	
P-639B	Gate	
Q-001	Head cap	

# F2N1-200

